



Tent Pitching Instructions Tempest 200 & 300

Flysheet First Pitching

1. Assemble poles and lay them parallel on the ground. There should be 1 long, 1 medium and 1 short alloy pole.
2. Open flysheet on ground and position tent in desired direction. Check that internal tension bands are loosened.
3. Locate pole sleeves on outside of flysheet and insert the long and medium poles. The sleeve ends are colour matched to the poles.
4. Insert the short pole and locate into the eyelets beside the main pole sleeve.
5. Locate one end of each main pole into corresponding eyelets on pole anchor straps.
6. From the opposite side, push poles into an arch and locate pole ends into corresponding eyelets on pole anchor straps.
7. Tighten up the tension straps at the base of the two main poles.
8. Peg out adjustable anchor straps at the rear of the tent using pegs supplied.
9. Pull flysheet forwards, away from pegged points, until tent takes shape. Peg the two front anchor straps using the remaining pegs.
10. Attach flysheet clips to poles.
11. Peg down pole anchor straps and remaining flysheet pegging points.
12. Peg out ALL guy lines.

Inner

1. Open out inner tent inside flysheet and position doorway to correspond with the porch entrance of the flysheet.
2. Starting from the rear corners of the tent, attach the elasticated hooks on the groundsheet to corresponding rings on the flysheet anchor straps. Suspend the inner by attaching hooks of inner tent with rings on inside of flysheet.
3. Align the porch groundsheet and clip / peg into place.

Tension Band System

1. Remove Tension Band System from pockets and clip into the corresponding sockets at the apex of each pole. Adjust the straps until they are taut.
2. The rear TBS straps are threaded through the access points on the inner.
3. DO NOT OVERTENSION. Excess tension will alter the shape of the tent and may permanently distort the poles.

